

# Quick guidelines for operation with addressable fire panel IRIS

## FIRE Event in the System

**FIRE ALARM Indication**

- GENERAL FIRE
- PRE ALARM
- GENERAL FAULT
- SYSTEM FAULT
- SYSTEM SILENCE
- DELAY
- DISABLE
- TEST
- POWER ON

**Activated Sounders**

**FIRE alarm in the zone**

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64
65	66	67	68	69	70	71	72
73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88
89	90	91	92	93	94	95	96

**1 Turn off the buzzer:**

**Go to the zone with fire alarm event and check for a real presence of FIRE**

**2 If NO FIRE in the premises - turn off the sounders:**

Enter code for ACCESS LEVEL 2 or 3

**3 If THERE IS FIRE in the premises and "Delay override" is programmed for the sounders - activate the outputs (sounders, control and signaling devices, etc):**

**4 Clear all alarm messages (access level 2 or 3):**

**5 The panel is in normal operation mode:**

## FAULT Event in the System

**FAULT Event Indication**

- GENERAL FIRE
- PRE ALARM
- GENERAL FAULT
- SYSTEM FAULT
- SYSTEM SILENCE
- DELAY
- DISABLE
- TEST
- POWER ON

**Activated Sounders**

**FIRE alarm in the zone**

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64
65	66	67	68	69	70	71	72
73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88
89	90	91	92	93	94	95	96

**1 Turn off the buzzer:**

**Check the type of FAULT!**

## WARNING Message event in the System

**FAULT Event Indication**

- GENERAL FIRE
- PRE ALARM
- GENERAL FAULT
- SYSTEM FAULT
- SYSTEM SILENCE
- DELAY
- DISABLE
- TEST
- POWER ON

**Activated Sounders**

**FIRE alarm in the zone**

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64
65	66	67	68	69	70	71	72
73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88
89	90	91	92	93	94	95	96

**1 Turn off the buzzer:**

**Check the type of WARNING!**

**2 Call the MAINTENANCE SERVICE and report for the type of FAULT or WARNING event:**

Tel.:.....

Mobile:.....

Responsible person:.....